

Common Screeding Scenarios

BONDED SCREEDS



1. To the suitably prepared concrete base, apply a grouting slurry of **ARDEX A 38 Ultra Rapid Drying Cement for Internal & External Screeds** and **ARDEX E 100 Additive for Bonding Slurry Grouts**.


2. Install and compact the **ARDEX A 38** screed fresh-in-fresh into the grouting slurry whilst it is still wet and workable.

3. If required, smooth and level the floor with **ARDITEX NA Ultra Rapid Setting Latex Levelling Compound**.

4. Fix the tiles to the floor using **ARDEX MICROTEC X 7001 Flexible Rapid Drying Pourable Floor Tile Adhesive**.

5. Grout the joints using **ARDEX-FLEX FL Flexible Tile Grout**.

For areas where greater chemical resistance is required, **ARDEX EG 8 PLUS Epoxy Tile Grout** can be used. Finish with **ARDEX ST Elastic Silicone Sealant** where required.

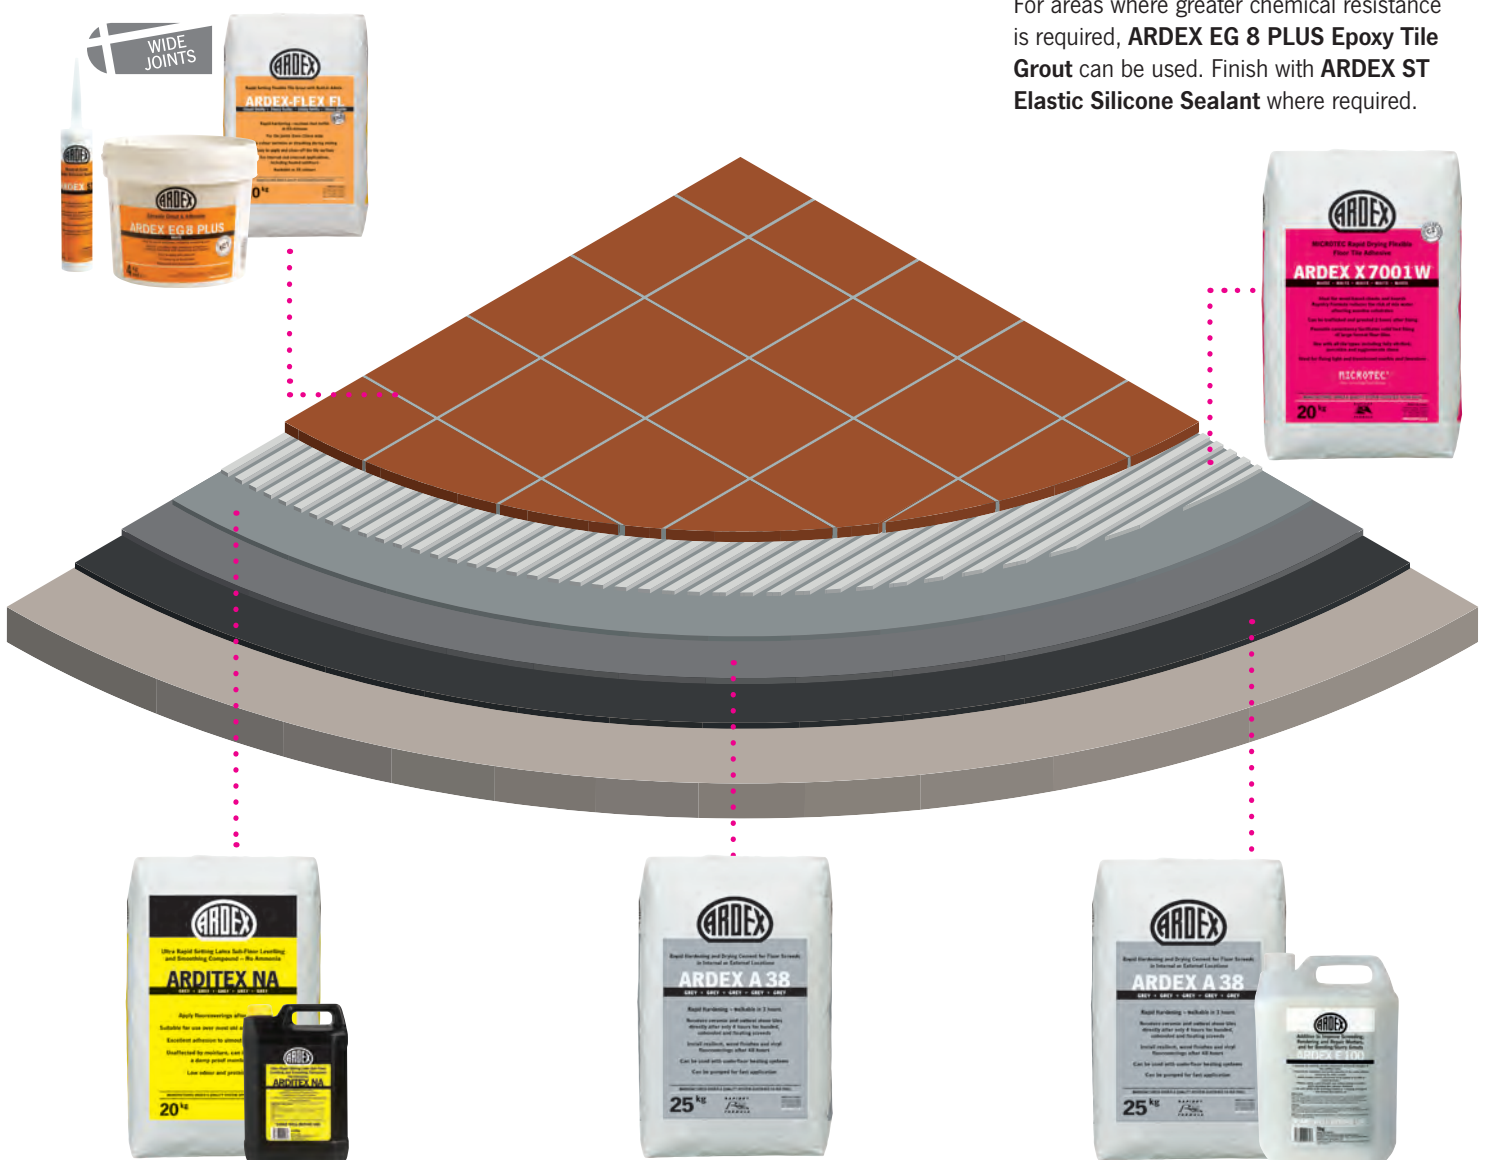

VogueCeramics

ARDEX Technical Support



Contact:
Andrew Reid
07966 646231
A.Reid@ardex.co.uk

Contact:
Ricky McNamara
07966 646232
R.Mcnamara@ardex.co.uk