

Common Tiling Scenarios - Walls PLASTERBOARD AND PLASTER

- Tiling to plasterboard - dry areas
- Internal walls




1. Ensure the walls are free of dust and any contaminants liable to impair adhesion.

2. Fix the tiles using **ARDEX MICROTEC X 77 Flexible Wall & Floor Tile Adhesive**.

3. Grout the joints using **ARDEX-FLEX FL Flexible Tile Grout**.

For areas where greater chemical resistance is required, **ARDEX EG 8 PLUS Epoxy Tile Grout** can be used. Finish with **ARDEX ST Elastic Silicone Sealant** where required.

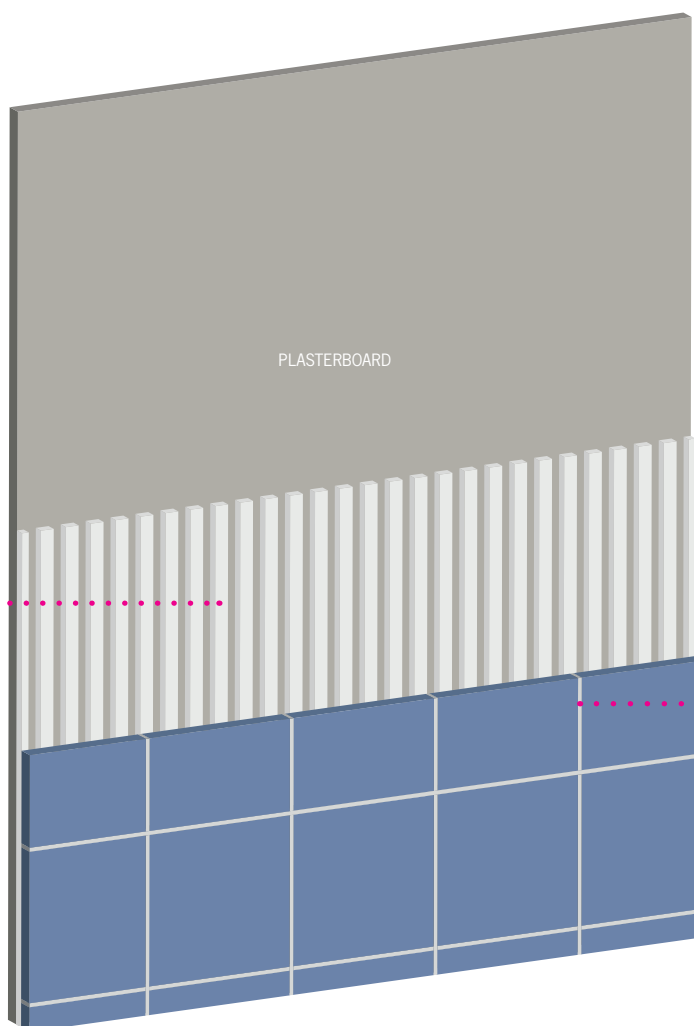

VogueCeramics

ARDEX Technical Support



Contact:
Andrew Reid
07966 646231
A.Reid@ardex.co.uk

Contact:
Ricky McNamara
07966 646232
R.Mcnamara@ardex.co.uk