

Common Tiling Scenarios - Floors

PLYWOOD FLOORS



- Tiling to timber floors - dry areas
- Internal floors



1. Ensure that the subfloor is made of suitable flooring grade plywood and is secured in accordance with BS 5385.

2. Prime the flooring grade plywood using neat **ARDEX P 51 Concentrated Primer** and allow to dry.

3. Fix the tiles to the primed floor using **ARDEX MICROTEC X 7001 Flexible Rapid Drying Pourable Floor Tile Adhesive**.

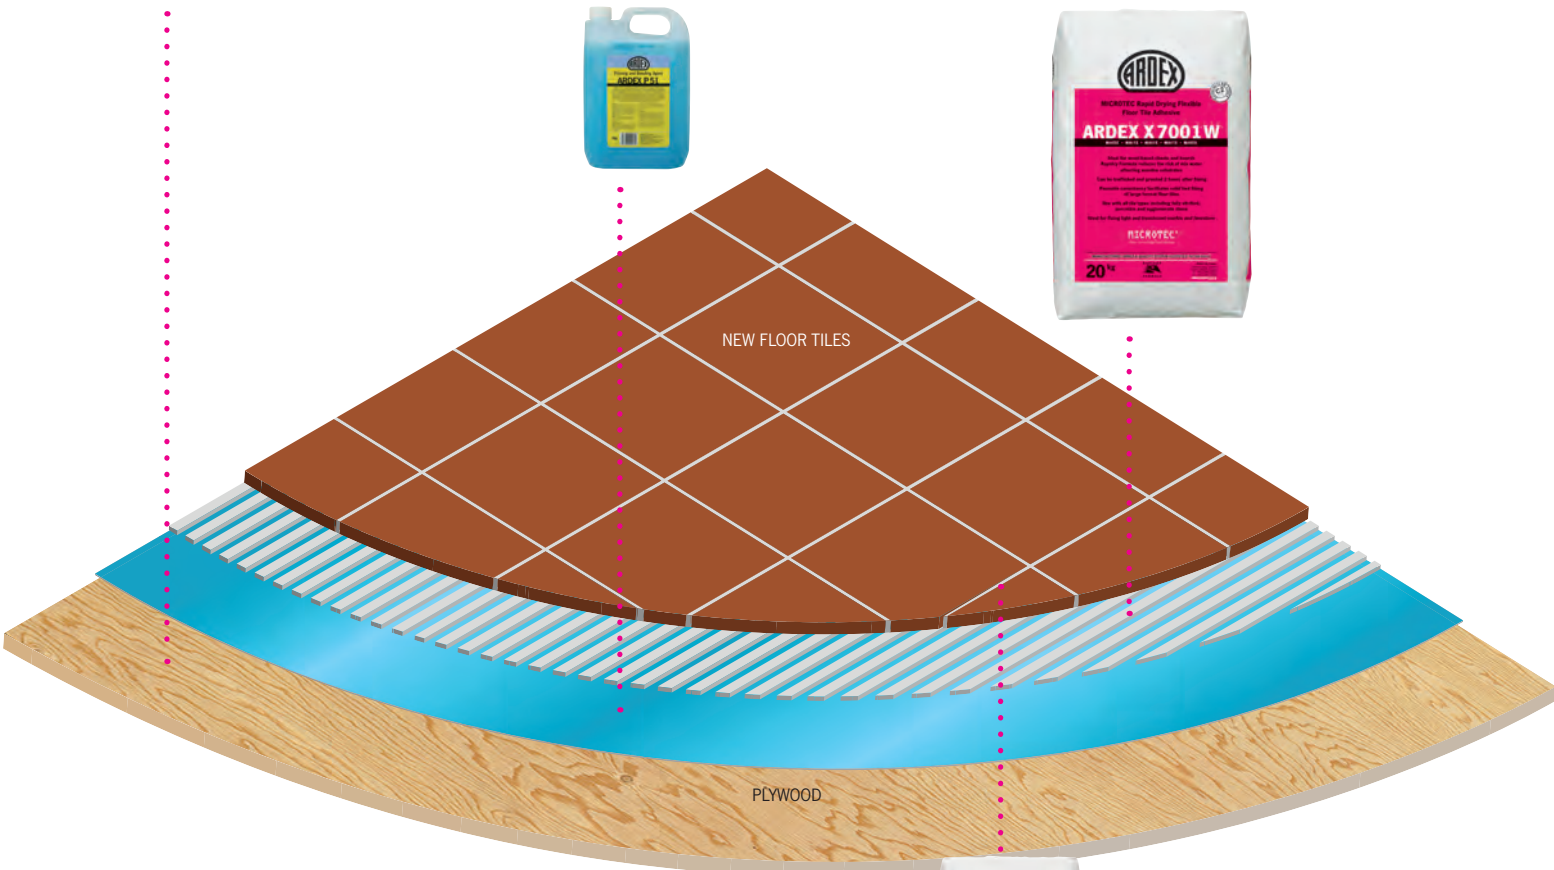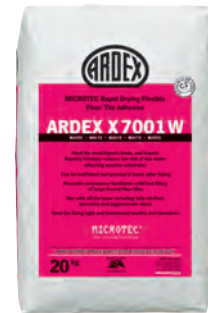

4. Grout the joints using **ARDEX-FLEX FL Flexible Tile Grout**.

For areas where greater chemical resistance is required, **ARDEX EG 8 PLUS Epoxy Tile Grout** can be used. Finish with **ARDEX ST Elastic Silicone Sealant** where required.

VogueCeramics

ARDEX Technical Support



Contact:
Andrew Reid
07966 646231
A.Reid@ardex.co.uk

Contact:
Ricky McNamara
07966 646232
R.Mcnamara@ardex.co.uk