

# Common Tiling Scenarios - Floors

## TILE ON TILE


- Tiling to existing ceramic floor tiling/terrazzo - dry areas
- Internal floors



1. Check the existing grout and tiles to ensure that they are not loose and fully secured. If required, smooth the floor using **ARDITEX NA Ultra Rapid Setting Latex Levelling Compound** at a thickness of between 2mm and 12mm neat, or up to 30mm with the inclusion of **ARDEX Coarse Aggregate**.

2. Thoroughly degrease the tiles and grout joints with **ARDEX DEGREASER** to remove any existing dirt, grease or contaminants, and allow to dry.

3. Apply **ARDEX P 4 Ready Mixed Multi-Purpose Primer** to the cleaned tiles and allow to dry.

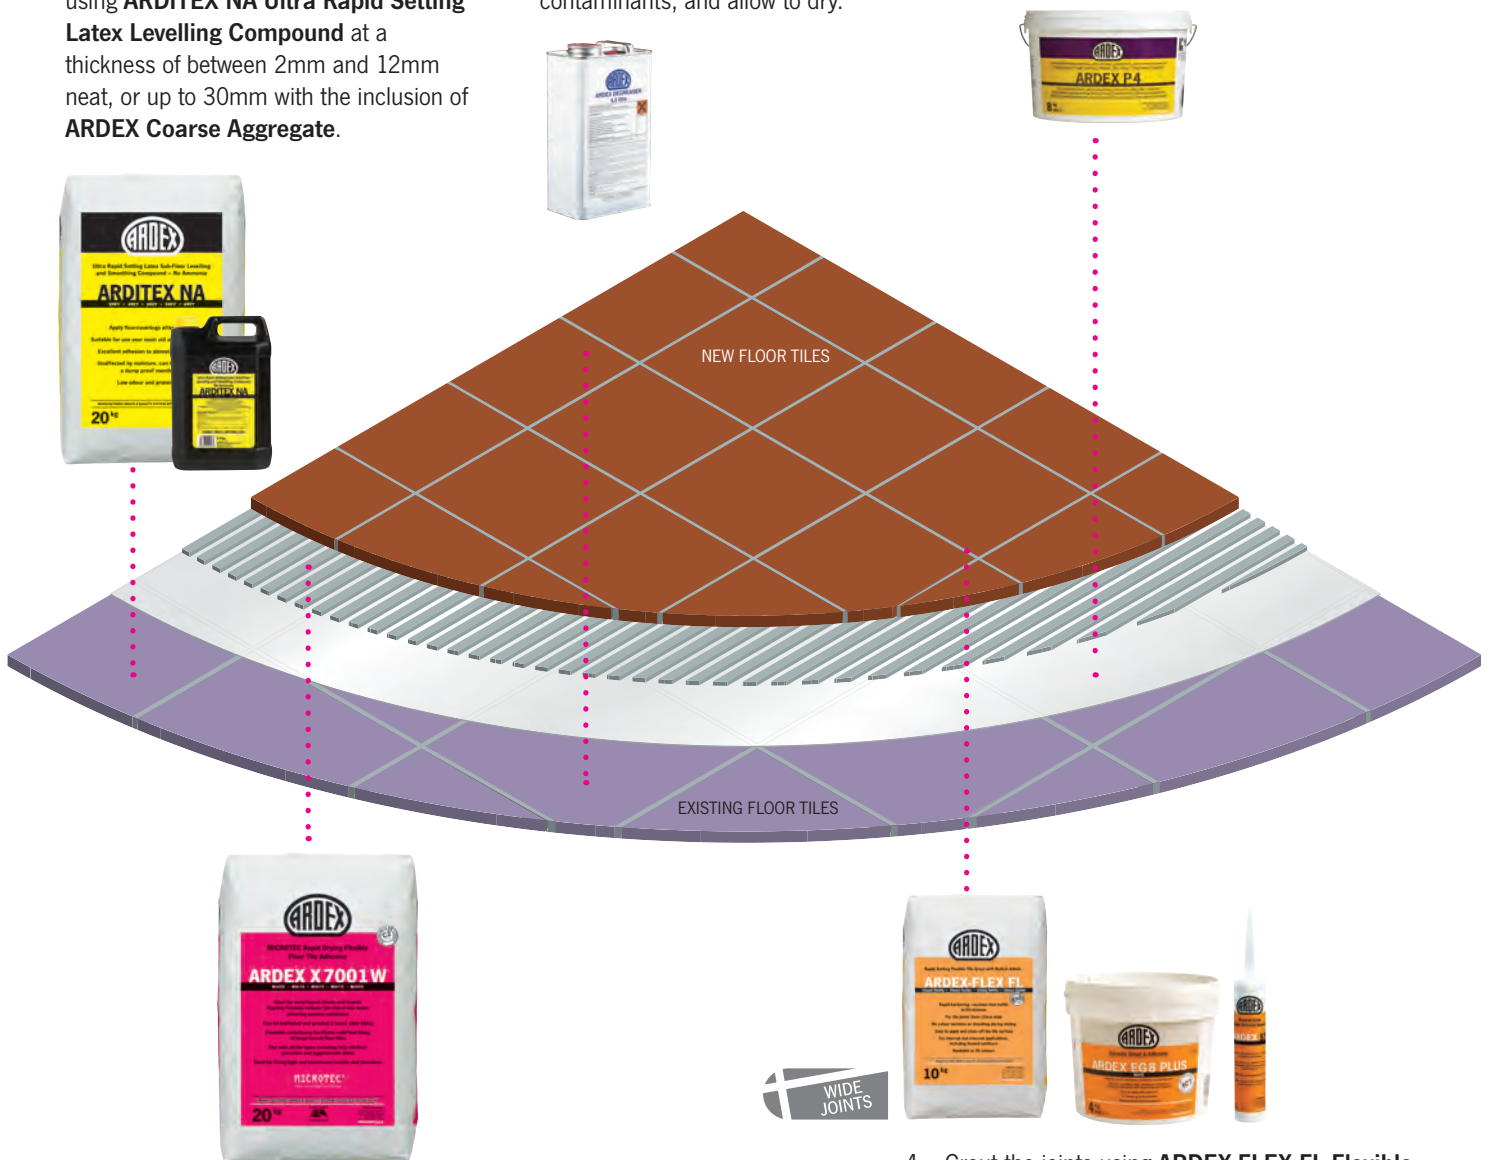

4. Fix the tiles to the primed floor using **ARDEX MICROTEC X 7001 Flexible Rapid Drying Pourable Floor Tile Adhesive**.

4. Grout the joints using **ARDEX-FLEX FL Flexible Tile Grout**.

For areas where greater chemical resistance is required, **ARDEX EG 8 PLUS Epoxy Tile Grout** can be used. Finish with **ARDEX ST Elastic Silicone Sealant** where required.

VogueCeramics

# ARDEX Technical Support



**Contact:**  
**Andrew Reid**  
**07966 646231**  
**A.Reid@ardex.co.uk**

**Contact:**  
**Ricky McNamara**  
**07966 646232**  
**R.Mcnamara@ardex.co.uk**