

# Common Tiling Scenarios - Walls

## TILE ON TILE

- Tiling to existing glazed/unglazed tiles – dry areas
- Internal walls



1. Check the existing tiles to ensure they are not loose and fully secured. Infill any loose or broken tiles using **ARDEX A 46 Multi-Purpose Repair Mortar**.



2. Thoroughly degrease the tiles and grout joints with **ARDEX DEGREASER** to remove any existing dirt, grease or contaminants, and allow to dry.



3. Apply **ARDEX P 4 Ready Mixed Multi-Purpose Primer** to the cleaned tiles and allow to dry.




4. Fix the tiles using **ARDEX MICROTEC X 77 Flexible Wall & Floor Tile Adhesive**.



5. Grout the joints using **ARDEX-FLEX FL Flexible Tile Grout**.

For areas where greater chemical resistance is required, **ARDEX EG 8 PLUS Epoxy Tile Grout** can be used. Finish with **ARDEX ST Elastic Silicone Sealant** where required.

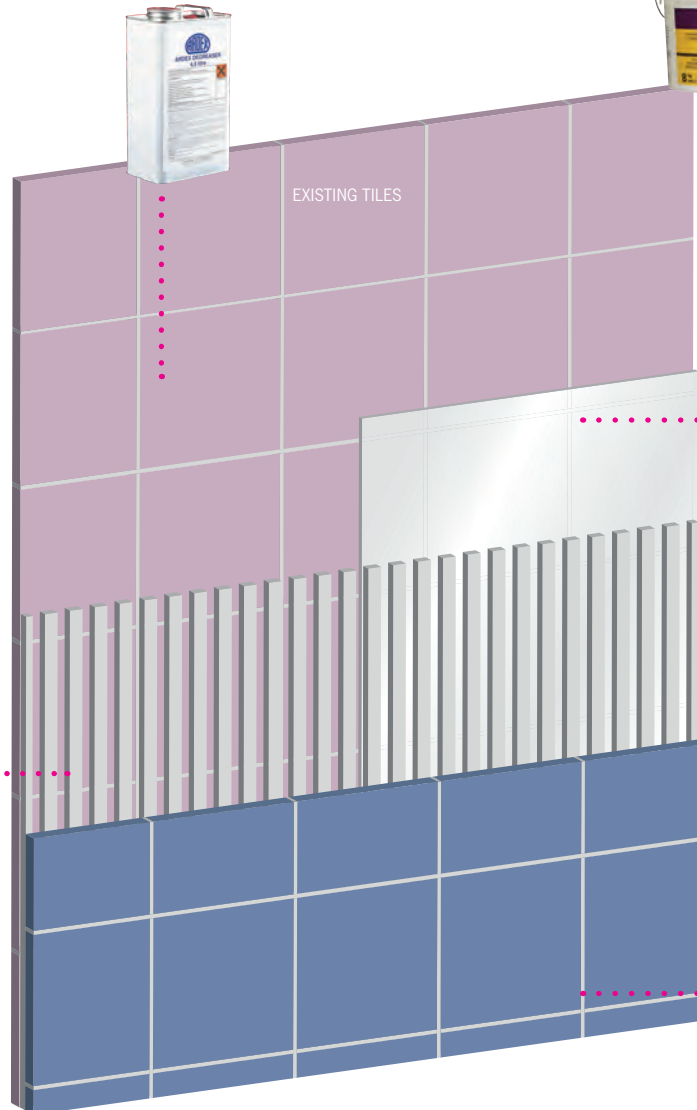

VogueCeramics

# ARDEX Technical Support



**Contact:**  
**Andrew Reid**  
**07966 646231**  
**A.Reid@ardex.co.uk**

**Contact:**  
**Ricky McNamara**  
**07966 646232**  
**R.Mcnamara@ardex.co.uk**